

HOW TO REPLACE RUBBER (CLICK) DOMES


1. Turn the click dome inside out.
2. Grasp dome and receiver (not the wire) with your fingers and pull dome off
3. Push the new click dome firmly into place onto receiver
4. Make sure new click dome clicks noticeably in place



If you have packaging of clicks domes

Follow instructions on the back of packaging

****Be careful no to pull receiver wire****

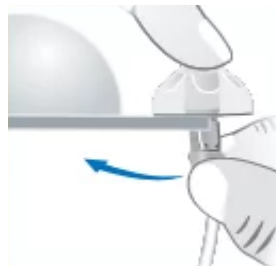


HOW TO REPLACE RUBBER DOMES

16.1 Removing the earpiece from the speaker


1

Remove the earpiece from the speaker by holding the speaker in one hand and the earpiece in the other.

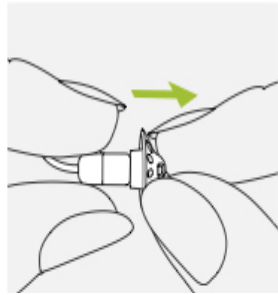


2

Gently pull off the earpiece to remove.

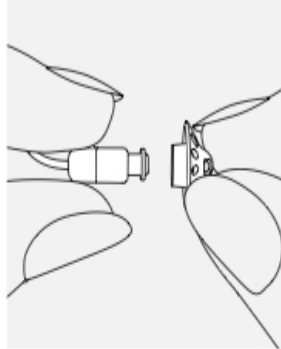

3


Clean the speaker with a lint-free cloth.

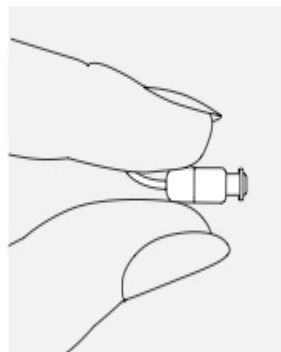

16.3 Attaching the earpiece to the speaker


1

Hold the speaker in one hand and the earpiece in the other.

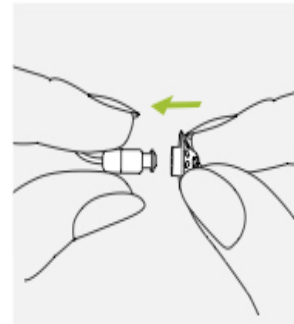

2

Slide the earpiece over the speaker sound outlet.

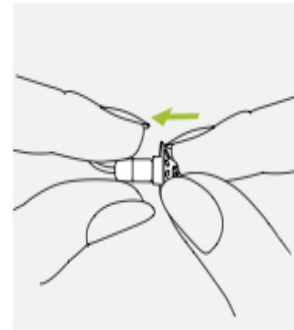

3

The speaker and the earpiece should fit perfectly together.

